

ALPHA[®] PV-100

Dispensing Solder Paste

DESCRIPTION

ALPHA PV-100 is a no-clean, dispensable, Sn/Pb solder paste. It is designed for high speed automated or manual dispensing through a wide range of needle sizes. The post soldering residues are clear and colorless, ideal for solar panel assembly applications.

READ ENTIRE TECHNICAL DATA SHEET BEFORE USING THIS PRODUCT

FEATURES & BENEFITS

- Processed and packaged void-free to assure consistent dispensing results.
- Clear, colorless, tack-free residue.
- Reliable, non-clogging dispensing. From >21 gauge down to 25 gauge needles available depending on the dispense volume requirements.
- Rheology to provide continuous, high speed dispensing (thousands of dispenses per hour) in modern positive displacement dispensers.

PRODUCT INFORMATION

| | |
|-------------------------|---|
| <u>Alloys:</u> | Sn63/Pb37; Sn62/Pb36/Ag2. Other alloys available by special request |
| <u>Rheology:</u> | Capable of high speed, non-agglomerating dispensing |
| <u>Packaging Sizes:</u> | 10cc (25g fill) and 30cc (75g fill) syringes in stock at most times |
| <u>Metal Percent:</u> | 85% |

APPLICATION GUIDELINES

Formulated for high speed dispensing with manual, time/pressure machines and automatic, positive displacement equipment. This solder paste will provide excellent results for high speed tabbing and stringing operations.

TECHNICAL DATA

| Category | Results | Procedures / Remarks |
|------------------------------|--|--|
| Fluxing Ability | Reflowed Solder Paste, Hot Solder Dip, Tin Plate, Tin Hot Dip, Silver Plate, Copper/OSP coated, Gold/Ni, Ag/Pd Plate, Sn/Pb alloy Coatings | Good wetting and solderability on these surfaces |
| Chemical Properties | | |
| Corrosivity | Copper Mirror Test (L) | IPC J-STD-004 Classification: ROL-1 |
| Halide Content | Silver Chromate Paper Test (Pass) | IPC J-STD-004 |
| Electrical Properties | | |
| SIR (IPC) | All readings > 1×10^9 ohms | Pass, 7 days uncleaned |
| SIR (Bellcore GR78) | All readings > 1×10^{13} ohms | Pass, 4 days uncleaned |
| Electromigration (Bellcore) | Initial @ 1.3×10^9 ohms; 6.5×10^9 @ 500 hr. | Passes visual and electrical |
| Physical Properties | | Using 85% Metal |
| Color | Clear, Colorless Flux Residue | |
| Density | Density = 4.67g/cc paste w/63Sn/37Pb alloy | |
| Tack Force | > 2.4 g/mm ² at 6 hours @ 72 %RH | J-STD-005 |
| Viscosity | 85% metal load designated M04, is suitable for a wide range of dispensing applications | Malcom Spiral Viscometer |
| Residues | ~5.5% w/w, after normal soldering conditions | |
| Slump | Suitable for fine pitch dispensing applications | IPC TM-650 |

PROCESSING GUIDELINES

| Storage-Handling | Dispensing | Heating | Cleaning |
|--|--|---|---|
| <ul style="list-style-type: none"> • Refrigerate to guarantee stability @ 33 to 45 °F (1 to 7 °C) • Shelf life of refrigerated paste is six months. Room temperature shelf life is 30 days. • Warm-up of syringe to room temperature (should be ~ 2 hours). Set up dispenser with room temperature paste. Do not place in sun or on a heated surface to accelerate warming. Check paste temperature with a thermometer. | <p>Before setup, continuously dispense until the paste has filled the needle insides and paste is flowing freely.</p> <ul style="list-style-type: none"> • Time/pressure dispensers should be set up with manufacturer's guidelines. Pressures of 10 to 20 lbs. are recommended without using vacuum suck back. Read the applications notes following regarding needle gap, stringing, and paste volume. • More sophisticated dispense systems usually have specific setup and running recommendations. The "needle map" contained in the ALPHA PV-100 Applications Notes recommends dispense volumes scientifically. • The insides of dispense mechanisms and needles can be cleaned and lubricated with "purge compounds" or ALPHA PV-100 paste flux available also in syringes. ALPHA PV-100 should be run through the dispense mechanism to wet the walls and exclude any foreign material prior to dispensing. | <ul style="list-style-type: none"> • Use convection, IR, or combination ovens, hot -plate, vapor phase, hot gun, heat bar or laser equipment • Clean-dry air or nitrogen atmosphere. <p>Profile (for oven heating)</p> <ul style="list-style-type: none"> • A straight ramp heating to reflow and straight ramp down to room temperature of all joints being soldered. <p>This is a general statement given the various methods to reflow dispensed paste and the varied equipment used in dispensing processes.</p> | <p>Although designed as a no-clean flux system, the residue may be cleaned with: BIOACT EC-7R, or EC-Ultra; ALPHA 2110 saponifier or SC-22. Aqueous cleaning will not turn ALPHA PV-100 residues cloudy.</p> <p>Clean needles with ALPHA SC-22 and fine wires. (or use disposable needles). An ultrasonic bath will assist loosening dried residues.</p> <p>Purge paste with a fine wire and flush with solvent in a squeeze bottle. Needles can also be pre-cleaned by dispensing paste flux (available in syringes from Alpha) through to purge solder particles and make subsequent cleaning easier.</p> |

SOLAR APPLICATIONS**1. What are the variable parameters affecting dispensing?**

1.1. Product (paste) Parameters: Viscosity, flow behavior, wetting behavior, temperature stability, homogeneity, and voids.

1.2. Machine Parameters: Nozzle distance to substrate, dwell time between dispenses, “Z” height return, I.D. of needle, dispensed dot diameter, pressure, dispense time.

2. What parameters affect the volume and shape of dispensed paste?

2.1. Surface Tension: The ability of a material to adhere to a surface. For instance, material and needle nozzle; material and substrate. It should be greater between the material and the substrate (board).

2.2. Shot Size: The time a valve or pressure is actuated and as related to the nozzle gap (“Z” height from nozzle tip to substrate).

2.3. Nozzle Gap: Dictates shot size. A rule of thumb is that the nozzle or needle gap = ½ needle I.D.

2.3.1. Footed Nozzles: A fixed distance “foot” is appended to the needle body and extends a distance below the needle tip, allowing the same gap between tip and substrate when the needle “bottoms out” on the substrate at each dispense.

2.3.2. Unfooted Nozzles: Gap is determined manually, with a camera, by touch probe or by laser sensor.

2.3.3. Consequences of gap too high: Insufficient shot size, lowers surface tension, results in intermittent dispenses.

2.3.4. Consequences of gap too low: Shot size is too large resulting nozzle contamination, tailing of material and dot defects.

2.4. Nozzle Gauge: Determines smallest dot (1.5 x Needle I.D.).

2.5. Dwell Time: Set in milliseconds on automated equipment or by trial and error on manual equipment. What happens within these milliseconds of the dispense portion of the cycle? The needle remains in the down position after dispensing to allow the material to wet sufficiently for the proper surface tension. When tension between material and substrate is achieved, the needle lifts up, and the tension allows the material to part from the needle tip and material within the needle and stay on the substrate. Manipulating the dwell will affect throughput and the dot profile.

2.6. Up Height: The distance the needle moves up after a dispense. Modern dispensers can be adjusted by .001” increments to optimize clean paste snap off from the needle.

3. Addressing Common Defects:


3.1. Tailing is caused by: Insufficient shot size; Nozzle gap too high; Up-height too low; paste chemistry.

3.2. Bulging Paste Bump: Insufficient nozzle gap; Shot size too large.

4. What about the Nozzles (needles)?

4.1. Types: Plastic, stainless steel, conical walled, straight walled, chamfered tips, footed and non-footed needles, luer lock and set screw locked.

- 4.2. Nozzle Selection Criteria:** Dot size (1.5 x I.D. needle); For larger dots, increase shot size or use a larger needle; Too small a nozzle may result in excessive shot size if pressure is allowed to rule.
- 5. What are the types of dispensing methods?** The 3 most common are: time/pressure, positive displacement piston and positive displacement rotary pump.
- 5.1. Time/Pressure:** Proven technology where you can discard used needles and syringes. It is difficult to set up, not suitable for reproducing very small volumes, and is subject to volume variation with changes in temperature and syringe volume (bubble effect).
- 5.2. Positive Displacement (Piston):** Consistent dots, low air pressure, but each piston pump is made for a specific dot size and must be removed and re-calibrated for a new size.
- 5.3. Positive Displacement (Rotary):** Consistent dots, infinite dot size flexibility, ambient temperature dispensing, simple setup and process control. Speed is dependent on needle size and requires more cleaning than time/pressure equipment.
- 6. Does the plunger (follower) in the syringe have an effect on dispensing?**
- 6.1.** Plungers are available in rubber, compounds, metal and plastic. They are either straight or concave walled. On PV-100, Orange plastic, straight walled followers (plungers) in the syringes provide best results in the widest range of applications. These plungers work best with high speed, automated equipment and require proper setup on time/pressure systems providing optimum results.
- 7. Summary:**
- 7.1.** Surface tension plays a key role in dispensing. Set up to optimize surface tension.
- 7.2.** Nozzle gap must be balanced with shot size and speed.
- 7.3.** Nozzle gauge and shot size control dot profile.
- 7.4.** Investment in correct method and process optimization ensures success.
- 7.5.** A “needle guide” is attached below (Courtesy Speedline CAMALOT)

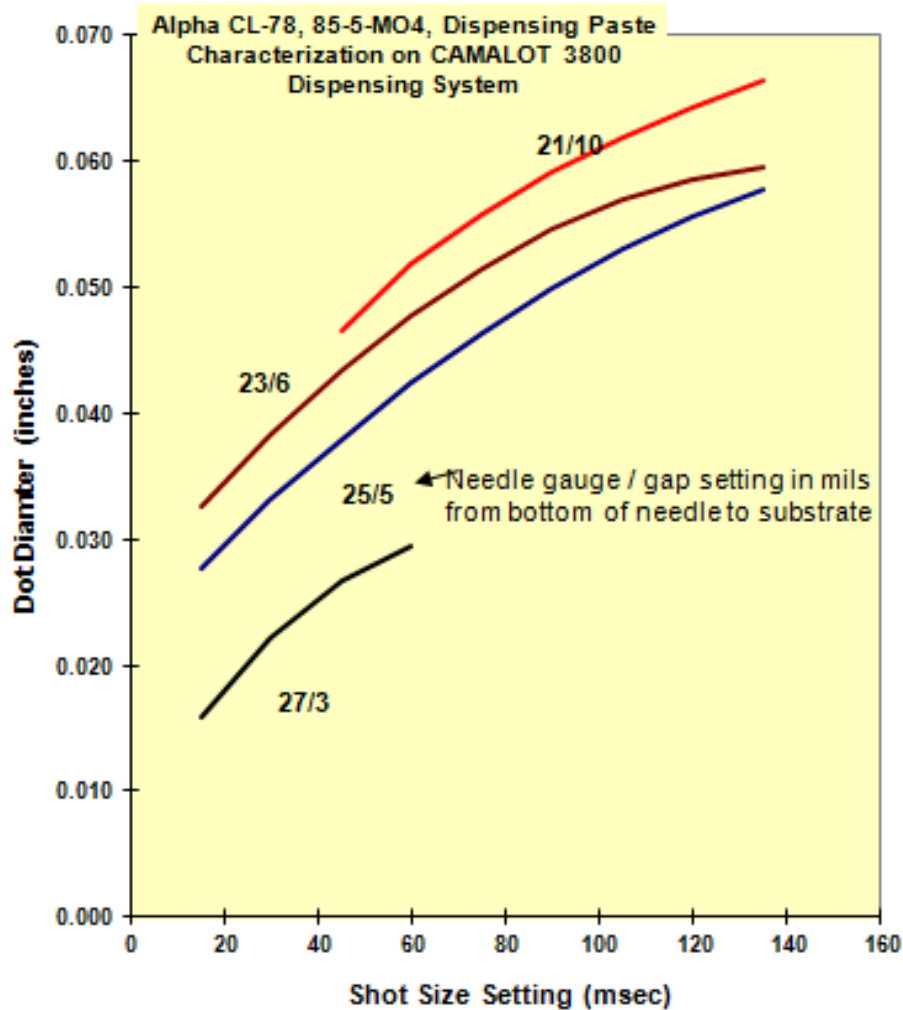

RECYCLING SERVICES

We provide safe and efficient recycling services to help companies meet their environmental and legislative requirements and at the same time, maximize the value of their waste streams.

Our service collects solder dross, solder scrap, and various forms of solder paste waste. Please contact your local sales representative for recycling capabilities in your area or [link here](#)



SAFETY & WARNING

It is recommended that the company/operator read and review the Safety Data Sheets for the appropriate health and safety warnings before use. **Safety Data Sheets are available at MacdermidAlpha.com/assembly-solutions/knowledge-base.**

STORAGE

ALPHA PV-100 is shipped in thermally controlled boxes and should be stored under refrigeration upon receipt at 33 to 45 °F (1 to 7 °C). This will be sufficient to maintain a nominal shelf life of six months although a 30 day room temperature shelf life can also be achieved. ALPHA PV-100 should be permitted to reach room temperature (usually two hours) before unsealing tip and end closures prior to use.

CONTACT INFORMATION

To confirm this document is the most recent version, please contact
Assembly@MacDermidAlpha.com

www.macdermidalpha.com

| | | |
|---|--|---|
| <p>North America 109 Corporate Blvd. South Plainfield, NJ 07080, USA 1.800.367.5460</p> | <p>Europe Unit 2, Genesis Business Park Albert Drive Woking, Surrey, GU21 5RW, UK 44.01483.758400</p> | <p>Asia 8/F., Paul Y. Centre 51 Hung To Road Kwun Tong, Kowloon, Hong Kong 852.3190.3100</p> |
|---|--|---|

Also read carefully warning and safety information on the Safety Data Sheet. This data sheet contains technical information required for safe and economical operation of this product. READ IT THOROUGHLY PRIOR TO PRODUCT USE . Emergency safety directory assistance: US 1 202 464 2554, Europe + 44 1235 239 670, Asia + 65 3158 1074, Brazil 0800 707 7022 and 0800 172 020, Mexico 01800 002 1400 and (55) 5559 1588

DISCLAIMER: All statements, technical information and recommendations contained herein are based on tests we believe to be reliable, but the accuracy or completeness thereof is not guaranteed. No statement or recommendation shall constitute a representation unless set forth in an agreement signed by officers of seller and manufacturer. NO WARRANTY OF MERCHANTABILITY, WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR ANY IMPLIED WARRANTY IS MADE. The following warranty is made in lieu of such warranties and all other warranties, express, implied, or statutory. Products are warranted to be free from defects in material and workmanship at the time sold. The sole obligation of seller and manufacturer under this warranty shall be to replace any noncompliant product at the time sold. Under no circumstances shall manufacturer or seller be liable for any loss, damage or expense, direct, indirect, incidental or consequential, arising out of the inability to use the product. Notwithstanding the foregoing, if products are supplied in response to a customer request that specifies operating parameters beyond those stated above, or if products are used under conditions exceeding said parameters, the customer by acceptance or use thereof assumes all risk of product failure and of all direct, indirect, incidental and consequential damages that may result from use of the products under such conditions, and agrees to exonerate, indemnify, defend and hold harmless MacDermid, Incorporated and its affiliates therefrom. No suggestion for product use nor anything contained herein shall be construed as a recommendation to use any product in a manner that infringes any patent or other intellectual property rights, and seller and manufacturer assume no responsibility or liability for any such infringement.

© 2019 MacDermid, Inc. and its group of companies. All rights reserved. "(R)" and "TM" are registered trademarks or trademarks of MacDermid, Inc. and its group of companies in the United States and/or other countries.