

ATROX® 800HT2VX-LV

PFAS-Free Hybrid Silver Sintered Electrically and Thermally Conductive Die Attach Paste

DESCRIPTION

ATROX 800HT2VX-LV is a Hybrid Silver sintered die attach paste with very high thermal conductivity, designed for GaN and SiC Semiconductor Power devices. **ATROX 800HT2VX-LV** has low resin bleed out and low condensable organics ensuring excellent package reliability with differentiated performance on thin dies.

READ ENTIRE TECHNICAL DATA SHEET BEFORE USING THIS PRODUCT

TYPICAL PROPERTIES

Material Properties	Method	Value	Remarks
A. Uncured			
Chemical Type		Thermosetting	
Color	Visual Grey		
Viscosity at 25 °C at 5.0 RPM	ASTM D2196-99	50,000 CPs	Brookfield Spindle 51
Thixotropic index (0.5 RPM/5.0 RPM)	ASTM D2196-99	5.5	Brookfield Spindle 51
Pot Life @ 23 °C (elapsed time for 25% increase in viscosity)	ISO 10364:1993	>24 hours	Brookfield Spindle 51
Storage Temperature		-40 °C/°F	
Shelf Life		6 months	
B. Cured			
Glass Transition (Tan δ Max)	DMA	53.5 °C	
Modulus at 25 °C	DMA	11.7 GPa	
Modulus at 260 °C	DMA	2.7 GPa	



Material Properties	Method	Value	Remarks
CTE 1 (below Tg)	TMA	37 ppm	
CTE 2 (above Tg)	TMA	102 ppm	
Thermal Conductivity: Bulk	Laser Flash	175 W/mK	
Volume Resistivity	4-Point Probe	0.000014 Ohms-cm	

DIE SHEAR STRENGTH: 1 mm x 5 mm x 0.1mm Au Die

Lead Frame	Cure Condition	Shear Temperature	Value
A. Metallized Di	е		
Ag	RT to 150 °C/30 min + 200 °C/120 min	260 °C	13 Kg-F
PPF (NiPdAu)	RT to 150 °C/30 min + 200 °C/120 min	260 °C	14 Kg-F
Cu	RT to 150 °C/30 min + 200 °C/120 min	260 °C	15 Kg-F

MATERIAL APPLICATION


ATROX 800HT2VX-LV is formulated to be applied using a time pressure pump equipped on most die bonders. The material should be consistently dispensed over time. Equipment settings need to be optimized for desired material deposition response based on model and configuration.



CURE PROFILE

ATROX 800HT2VX-LV cures using ramp profile with 30 minute soak at 150 °C + ramp 20 minutes to 200 °C and soak for 120 minutes. For enhanced sintering, a 250 °C peak temperature can be employed with similar ramp rates. The use of N2 is optional as the material is designed to cure in both Air and N2 environments. It is recommended, that the cure schedule includes a ramp at 5 to 10 °C per minute after 10 °C and a controlled cooling cycle to minimize thermal stresses. Depending on the thermal mass of the application cure times may vary and should be optimized by the end user.

ATROX 800HT2VX-LV Cure Profile 30min + 150C/30min + 20min + 200C/120min

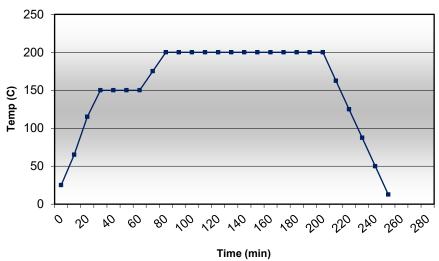

Time (Min.) Temp. °C	25	30 150	60 150	200	200	260 25
Temp. C		p-Up	HOLD	Ramp-up	Hold	Ramp-Down



RELIABILITY PERFORMANCE

ATROX 800HT2VX-LV achieves high reliability of MSL1 with stable Electrical and Thermal performance during reliability testing. There is no limitation on die size for all metallized die packages. However, it is recommended to consult with your local Technical Service for optimizing critical parameters for specific packages.

CLEAN-UP

Uncured material may be cleaned from dispenser components and surfaces with a variety of solvents, including IPA, acetone, MEK, methylene chloride, etc. Always wash and dry thoroughly prior to re-use of the dispenser components. The cleaning technique should be active cleaning of the components – flush, wash or wipe, followed by a drying step to ensure a clean, dry surface. Contact your equipment supplier to ensure the solvent is compatible with their components. Clean and maintain dispense valves as recommended by the equipment manufacturer.

AVAILABILITY

ATROX 800HT2VX-LV is available in 5 or 10 cc EFD or Musashi syringes and 100 g jars.


SHIPPING & STORAGE

Material is normally shipped in insulated boxes using dry ice to ensure that the maintains all its properties. On receipt, it must be ensured that dry-ice remnants are present in the insulated shipping box. If there is no dry ice, or if the material is not cold, then please contact MacDermid Alpha Electronics Solutions immediately. Exposure to elevated temperatures during shipment and storage will compromise the performance of the material adversely.

It is recommended to store the syringes of material at -40 °C for a maximum shelf life of 6 months. It is recommended that the material be allowed to thaw before usage. Typical thawing times for 5cc and 10cc syringes are presented in the chart below. Remove the syringe from the freezer and set it aside, allowing it to thaw at room temperature until it reaches room temperature (90 minutes maximum for 30cc syringe). To prevent contamination of unused products, do not return any material to its original container.





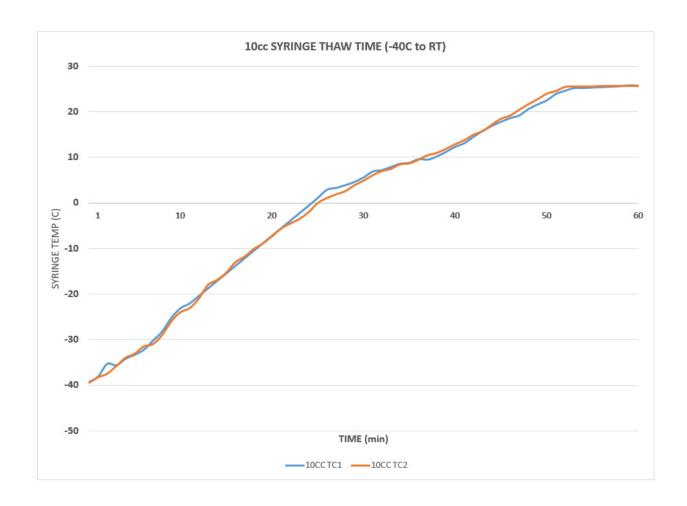



SAFETY & WARNING

It is recommended that the company/operator read and review the Safety Data Sheets for the appropriate health and safety warnings before use. **Safety Data Sheets are available.**

CONTACT INFORMATION

www.macdermidalpha.com

North America
140 Centennial Avenue
Piscataway, NJ 08854
1.800.367.5460

EuropeUnit 2, Genesis Business Park
Albert Drive
Woking, Surrey, GU21 5RW, UK
44.01483.758400

14 Joo Koon Crescent, Singapore 629014 65.6430.0700

Also read carefully warning and safety information on the Safety Data Sheet. This data sheet contains technical information required for safe and economical operation of this product. READ IT THOROUGHLY PRIOR TO PRODUCT USE: Emergency safety directory assistance: US 1 202 464 2554, Europe + 44 1235 239 670, Asia + 65 3158 1074, Brazil 0800 707 7022 and 0800 172 020, Mexico 0 1800 002 1400 and (55) 5559 1588

DISCLAIMER: All statements, technical information and recommendations contained herein are based on tests we believe to be reliable, but the accuracy or completeness thereof is not guaranteed. No statement or recommendation shall constitute a representation unless set forth in an agreement signed by officers of seller and manufacturer. NO WARRANTY OF MERCHANTABILITY, WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR ANY IMPLIED WARRANTY IS MADE. The following warranty is made in lieu of such warranties and all other warranties, express, implied, or statutory. Products are warranted to be free from defects in material and workmanship at the time sold. The sole obligation of seller and manufacturer under this warranty shall be to replace any noncompliant product at the time sold. Under no circumstances shall manufacturer or seller be liable for any loss, damage or expense, direct, incidental or consequential, arising out of the inability to use the product. Notwithstanting the foregoing, if products are supplied in response to a customer request that specifies operating parameters beyond those stated above, or if products are used under conditions exceeding said parameters, the customer by acceptance or use thereof assumes all risk of product failure and of all direct, indirect, incidental and consequential damages that may result from use of the products under such conditions, and agrees to exonerate, indemnify, defend and hold harmless MacDermid, Incorporated and its affiliates therefrom. No suggestion for product use nor anything contained herein shall be construed as a recommendation to use any product in a manner that infringes any patent or other intellectual property rights, and seller and manufacturer assume no responsibility or liability for any such infringement.

© 2019 MacDermid, Inc. and its group of companies. All rights reserved. "(R)" and "TM" are registered trademarks or trademarks of MacDermid, Inc. and its group of companies in the United States and/or other countries.